



TECHNOCRATICS (Pvt) Ltd.

ISO 9001:2015 Certified Company

Disposable Anti-Static Cleanroom Door Floor Sticky Mats

Sr. #	Technical Parameter:	
1	Film Material	Low Density Polyethylene
2	Adhesive Material	Water-based acrylic
3	Tensile Strength	1.2kg/cm
4	Film Thickness	35micron
5	Adhesive Thickness	5micron
6	Size	18"X24" , 24x36
7	Color	Blue
8	Layers	30layers
9	Package	10pcs prer box

Pictrure:

Top Protective Film
Transparent non-adhesive protective layer, Mainly for protection
Remove this layer before use

Single Coated Layer
Adhesive PE film, color and thickness can be customized

Double Coated Layer
Double-sided adhesive PE, one side is adhered to the ground and one side is connected to the middle layer

Bottom Protective Film
Non-adhesive protective layer, Mainly for protection

Head Office Karachi

+92-21-35001798
+92-333-0297007
+92-321-2202241
+92-300-3972448
www.technocratics.com.pk
technocratics@gmail.com
info@technocratics.com.pk
Plot No. 763, Future Colony Mor, Main Korangi Industrial Area Road, Karachi-75120

Branch Office Lahore

+92-301-9228811, +92-334-6600557
L-32 Main Street, Al-Nafy Homes, Ring Road, Near WAPDA Office, Harbanspura, LAHORE
0333-0297007, 0321-2202241

Branch Office Islamabad

+92 334 6600557
Awan Plaza River Garden, Islamabad Express Highway, Islamabad
0333-0297007, 0321-2202241



TECHNOCRATICS (Pvt) Ltd.

ISO 9001:2015 Certified Company



<< Good Tensile Strength

Longitudinal Tensile Strength(MPA): ≥ 15
Transverse Tensile Strength(MPA): ≥ 10
Longitudinal Elongation at break(%): ≥ 185
Transverse Elongation at break(%): ≥ 240

18" X 36"
(45X90CM)



24" X 36"
(60X90CM)



How To Use It




1. Tear the substrate




2. Agglutinate the bottom glue and underlay



3. Tear the surface layer

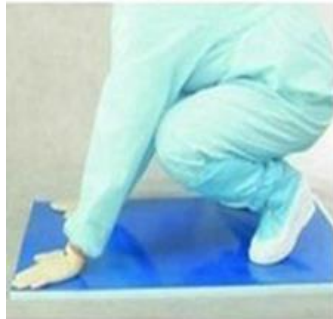


4. Begin to use

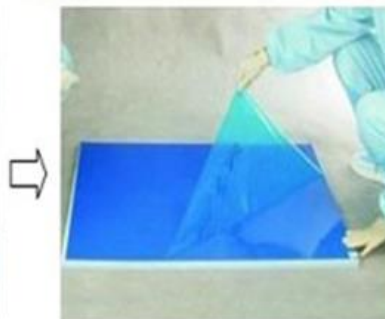


5. Begin to tear from label after using



6. Haul from another angle

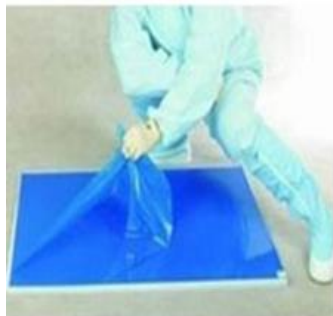

7. Haul from the third angle

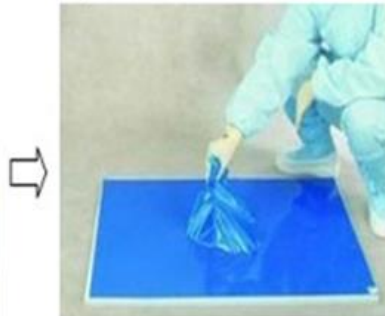

8. Wrap up the dust



9. Abandon the used sticky mats

Head Office Karachi

+92-21-35001798
+92-333-0297007
+92-321-2202241
+92-300-3972448
www.technocratics.com.pk
technocratics@gmail.com
info@technocratics.com.pk
Plot No. 763, Future Colony Mor, Main Korangi
Industrial Area Road, Karachi-75120

Branch Office Lahore

+92-301-9228811, +92-334-6600557
L-32 Main Street, Al-Nafy Homes, Ring Road,
Near WAPDA Office, Harbanspura, LAHORE
0333-0297007, 0321-2202241

Branch Office Islamabad

+92 334 6600557
Awan Plaza River Garden,
Islamabad Express Highway, Islamabad
0333-0297007, 0321-2202241